

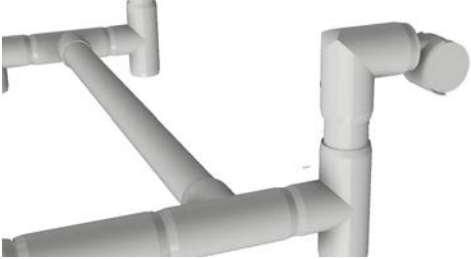



Heavy Duty Mobile Shield, LB-MB200404-PVC


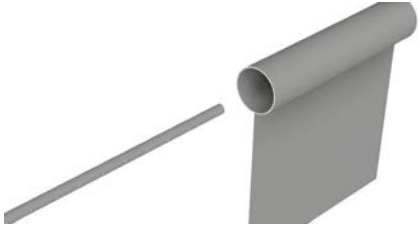

Tools required.

- Phillips Screwdriver

Instructions

Step	Description	Picture
1	Place Center base on its side. This will expose two opening. This means that there is one opening facing the floor.	
2	Place the 2 Rear supports into place.	
3	To ensure the Rear Support remain in place, tighten with screws. You will need 4 screws, one for each extension from the main frame.	
4	Place the Front Supports into place. This will require you flip the object over and place the front of the assembly face up.	

Heavy Duty Mobile Shield,
LB-MB200404-PVC

5	<p>Again to make sure that the Front Supports remains with the assembly. You will need 2 screws to attach the Rear Supports to the Assembly.</p>	
6	<p>Slide the Shield on to "U" shaped beam.</p>	
7	<p>Insert the "U" shaped beam into opening on the top of the PVC Center Base.</p>	
8	<p>Lower the "U" shaped beam into desired location. Once the desired location is met, slide push pin into the "U" shaped beam to hold the location.</p>	